

## GNSS Network Time Server 6890

### Quick Installation Guide

1. Cable your device with PoE+ (Option 1) or with external 24VDC power supply (Option 2)

**Remark:** For power supply redundancy both power supply options may be combined!

2. Connect your browser to the device: <http://192.168.0.1>
3. Login to **hopf** unified management application **huma® web edition** with the following default credentials:

username: **administrator**

password: **administrator**

